



Broadcast Plus iCap Video enable

Broadcast Plus iCap Video frame enable is located at the bottom left of the iCap webtools configuration page on the encoder under iCap. Apply the settings and then Stop the client and restart it to connect to the Broadcast Plus servers. The server type should report “Broadcast plus”.

iCap Web-based Configuration

Login

Company Name

User Name

Password

Server Name

Remote Server

GPO Monitoring

☐ Monitor connection on GPO 3

☐ Monitor S1 activity on GPO 4

Audio

☒ Use high bandwidth audio

Video

☒ Send video frames (iCap Broadcast Plus accounts)

☐ Allow 708 S3-S6 Languages

iCap Status

Status

Connected

Server Type

Broadcast Plus

ComCC Status

Off

Audio Packets Sent

994100

Relay ID

1451369432

Version

4.0.1

iCap Running

Yes

iCap Client

Start

Stop

Misc.

[View iCap Admin](#)

Apply

Reset Connection